

| ALINCO DJ-S11 | |
|----------------------|---|
| | Press PTT to exit setting mode |
| OFFSET | Push & hold F&SCAN. SCAN for -+. |
| TONE | F+ ▼ for on/off. ▼ ▲ for tone. |
| Write mem | VFO, then F&V/M, ▼ ▲ to select mem |
| PWR | While xmitting, SCAN/SHIFT. |
| Mem selt | V/M, ▼ ▲. |
| APO | F&LAMP. ▼ ▲ to select time |
| LOCK | F&MON. To unlock, repeat. |
| RESET | F + Power |

| ALINCO DJ-S11 | |
|----------------------|---|
| | Press PTT to exit setting mode |
| OFFSET | Push & hold F&SCAN. SCAN for -+. |
| TONE | F+ ▼ for on/off. ▼ ▲ for tone. |
| Write mem | VFO, then F&V/M, ▼ ▲ to select mem |
| PWR | While xmitting, SCAN/SHIFT. |
| Mem selt | V/M, ▼ ▲. |
| APO | F&LAMP. ▼ ▲ to select time |
| LOCK | F&MON. To unlock, repeat. |
| RESET | F + Power |
| | |

| ALINCO DJ-S11 | |
|----------------------|---|
| | Press PTT to exit setting mode |
| OFFSET | Push & hold F&SCAN. SCAN for -+. |
| TONE | F+ ▼ for on/off. ▼ ▲ for tone. |
| Write mem | VFO, then F&V/M, ▼ ▲ to select mem |
| PWR | While xmitting, SCAN/SHIFT. |
| Mem selt | V/M, ▼ ▲. |
| APO | F&LAMP. ▼ ▲ to select time |
| LOCK | F&MON. To unlock, repeat. |
| RESET | F + Power |

| ALINCO DJ-S11 | |
|----------------------|---|
| | Press PTT to exit setting mode |
| OFFSET | Push & hold F&SCAN. SCAN for -+. |
| TONE | F+ ▼ for on/off. ▼ ▲ for tone. |
| Write mem | VFO, then F&V/M, ▼ ▲ to select mem |
| PWR | While xmitting, SCAN/SHIFT. |
| Mem selt | V/M, ▼ ▲. |
| APO | F&LAMP. ▼ ▲ to select time |
| LOCK | F&MON. To unlock, repeat. |
| RESET | F + Power |